
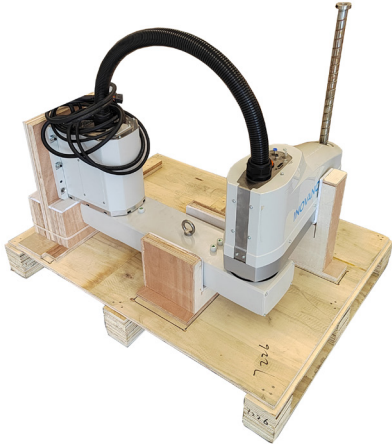


Transportation Instructions of IR-S20 Series Wall-Mounted SCARA Robots

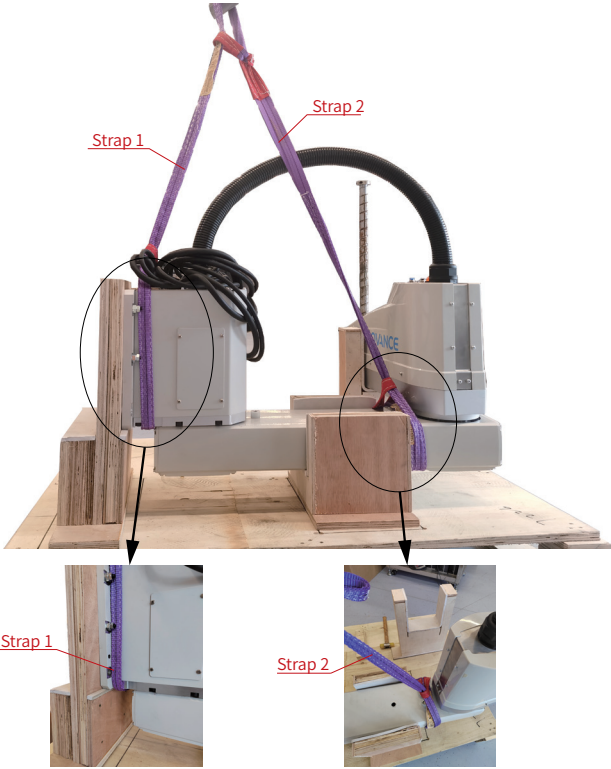

19012462A00

Transport the robot following the instructions below::

Step	Illustration
<p>Step 1. Keep the robot in the state as it was delivered.</p>	
<p>Step 2. Pass a strap 1 through the robot base and strap 2 through the upper arm, apply a preload to the straps and remove four bolts fixing the robot base.</p> <div data-bbox="124 1198 261 1240" style="border: 1px solid black; padding: 2px; display: inline-block;"> CAUTION </div> <p>(1) Adjust the hook to keep the balance of robot when lifting it. (2) Secure the straps to prevent them from slipping during transportation.</p>	
<p>Step 3. Adjust the forearm to parallel with the upper arm. Handle the robot with two people, with one holding the robot during transportation and the other operating the lifting equipment. Lift the robot slowly and move it to the installation tabletop.</p>	